

OWNER'S MANUAL

B-AIR BLOWER

CUB POWER

MODEL # CP-1

CE



INTRODUCTION

- OPERATION
- SAFETY
- SERVICE
- WARRANTY
- CONTACT
- SPECIFICATIONS
- TROUBLESHOOTING

READ AND SAVE THESE INSTRUCTIONS

INTRODUCTION TO B-AIR CP-1

- YOUR NEW B-AIR “CUB” # CP-1 BLOWER HAS A 1/4 HP HIGH EFFICENCY MOTOR.
- STATE OF THE ART CONSTRUCTION AND SCREENS ON OPEN VENTS FOR SAFETY AND LONG LIFE.
- HANDLES IS DESIGNED FOR EASY CARRYING
- OPERATES IN THREE DIFFERENT POSITIONS.

OPERATION/USE

THE CUB POWER BLOWER IS INTENDED TO INFLATE SMALL INFLATABLE STRUCTURES AS WELL AS A VARIETY OF OTHER APPLICATIONS SUCH AS: JANITORIAL, VENTILATION AND RESTORATION INDUSTRIES.

CAREFULLY PLACE THE B-AIR CUB UNIT ON STABLE FLAT DRY SURFACE-KEEPING CHILDREN AWAY.

- A) ATTACH AN INFLATABLE TUBE AROUND THE EXHAUST OPENING USING STRAPS OR ANY OTHER FORM OF TIGHTENER.
- B) PLUG CORD INTO A GROUNDED GFCI OUTLET ONLY.
- C) TURN ON SWITCH AND MAKE SURE IT IS OPERATING CORRECTLY.
- D) ALL BLOWERS IN OPERATION MUST BE SUPERVISED AT ALL TIMES.

STORAGE

STORE UNIT INDOORS IN A CLEAN DRY ENVIRONMENT TO ENSURE LONG LIFE

SAFETY

- 1) KEEP CHILDREN AWAY FROM UNIT AT ALL TIMES WHILE IN OPERATION AND/OR PLUGGED IN.
- 2) DO NOT PUT FINGERS OR OTHER OBJECTS IN UNIT WHILE IN OPERATION AND/OR PLUGGED IN.
- 3) DO NOT OPERATE IN POOLED WATER TO AVOID ELECTRIC SHOCK.
- 4) UNIT MUST BE KEPT DRY AT ALL TIMES, INCLUDING MOTOR, WIRING AND EXTERIOR. IF UNIT BECOMES WET, THOROUGHLY DRY BEFORE NEXT OPERATION.
- 5) INDOOR USE: USE ONLY WITH A GROUNDED PLUG AND/OR EXTENSION CORD TO AVOID RISK OF ELECTRICAL SHOCK OR FIRE. REMEMBER NEVER TO USE A CORD WITH ANY KIND OF DAMAGE OR WEAR.
- 6) MAKE SURE THE POWER SOURCE IS SUFFICIENT TO MEET THE REQUIREMENTS OF THE BLOWER.
- 7) KEEP AIR INTAKES CLEAR AT ALL TIMES TO AVOID CLOGGING OR BLOCKING IN ORDER TO PREVENT OVERHEATING THE UNIT. BLOCKING THE AIR INTAKES COULD RESULT IN A FIRE OR ELECTRICAL HAZARDS.
- 8) DO NOT REMOVE ANY SCREENS OR SAFETY GUARDS FROM THIS UNIT TO PREVENT INJURY TO PERSONS, AND TO AVOID OBJECTS FROM COMING IN CONTACT WITH THE BLOWER WHEEL. UNIT DAMAGE IN THIS MANNER WILL VOID YOUR WARRANTY.
- 9) DO NOT OPERATE UNIT CLOSE TO ANY DANGEROUS AREAS, SUCH AS EXPLOSIVE GASES, FLAMMABLES, HEATERS AND UNVENTILATED ENVIRONMENTS, WHICH MAY RESULT IN EXPLOSIONS OR ELECTRICAL HAZARDS.
- 10) DO NOT USE ANY FORM OF SPEED CONTROL DEVICE AS DOING SO MAY RISK INJURY OR FIRE.
- 11) ALWAYS PLACE BLOWER ON A SMOOTH AND LEVELED SURFACE FOR SAFE OPERATION.
- 12) DO NOT OPERATE IN STACKED POSITION.
- 13) DO NOT USE UNIT IF DAMAGED.
- 14) BEFORE CLEANING OR SERVICING UNPLUG UNIT.
- 15) ALL BLOWERS IN OPERATION MUST BE SUPERVISED AT ALL TIMES.
- 16) DO NOT EXPOSE TO RAIN, WATER OR SNOW.
- 17) OUTDOOR USE: UNIT MUST BE CONNECTED TO A G.F.C.I (GROUND FAULT CIRCUIT INTERRUPTER) PROTECTED RECEPTACLE.

WARRANTY

1 YEAR: From Original Purchase date will cover all parts (except Cords), labor and one-way shipping costs to your location in the 48 Contiguous states, using UPS Ground Service. Customer will pay shipping to our warehouse. Canada and Non-Contiguous States must pay for freight both ways.

5-YEAR: B-Air will cover Housing from date of Original purchase.

SERVICE

IN ORDER TO RECEIVE SERVICE OR REPLACEMENT PARTS UNDER WARRANTY, YOU MUST:

- A) CALL FOR A RMA# (Return Merchandise Authorization Number)
- B) HAVE PROOF OF PURCHASE
- C) SHIP TO: B-AIR BLOWERS
 - IF IMMEDIATE SERVICE IS REQUIRED, B-AIR WILL SHIP A REFURBISHED BLOWER IMMEDIATELY TO REPLACE THE ONE REQUIRING SERVICE IF A CREDIT CARD IS PROVIDED AND CHARGED. ONCE WE RECEIVE YOUR BLOWER, WE WILL CREDIT YOUR CREDIT CARD ACCOUNT.
 - WE WILL GLADLY REPAIR YOUR BLOWER AND SHIP WITHIN 24 HOURS

UPON INSPECTION, WE WILL CALL WITH THE STATUS OF YOUR BLOWER AND WILL ISSUE REPAIR OR REPLACEMENT PARTS DEPENDING ON WARRANTY CRITERIA.

CORDS

- 1) DO NOT USE EXTENSION CORDS FOR OUTSIDE USE.
- 2) USE 3 PRONG ADAPTORS THAT ARE UL AND CE APPROVED AND NOT LESS THAN 18-3 WITH GROUND FAULT CIRCUIT INTERRUPTER (GFCI).
- 3) DO NOT USE CORDS THAT SHOW ANY KIND OR WEAR OR DAMAGE.
- 4) CORDS ARE NOT COVERED BY ANY WARRANTY.

B-AIR BLOWERS LIMITED WARRANTY

COVERS

- 1) B-AIR BLOWERS ARE COVERED AGAINST DEFECTS IN MATERIAL AND CRAFTSMANSHIP USED UNDER NORMAL INTENDED USE TO ORIGINAL PURCHASER FOR A TERM OF (1) ONE-YEAR FROM THE ORIGINAL DATE OF PURCHASE.
- 2) B-AIR BLOWERS HOUSING IS COVERED FOR A TERM OF (5) FIVE FULL YEARS FROM THE DATE OF THE ORIGINAL PURCHASE.

DOES NOT COVER

- 1) ANY SIGNS OF MISUSE INCLUDING; BUT NOT LIMITED TO ROUGH HANDLING, ABUSE, TAMPERING, IMPROPER VOLTAGE USE, UNAUTHORIZED MAINTENANCE AND REPAIRS.

WARNING

**ALL BLOWERS IN OPERATION MUST BE SUPERVISED AND ATTENDED AT ALL TIMES.
THE USE OF A 3-PRONG TO 2-PRONG ADAPTER IS PROHIBITED.
ONLY USE A 2-PRONG TO 2-PRONG ADAPTER.**

CONTACT

**INTERTEX, INC /B-AIR BLOWERS
1851 TYBURN STREET
GLENDALE, CA 91204
1-877-800-2247(BAIR)
FAX:(818) 242-2430
EMAIL:info@b-air.com
WEB SITE: www.b-air.com**

SPECIFICATIONS

MODEL: CP-1

VOLTAGE	115 V	230 V
MAX AIR VOLUME	375 CFM	345 CFM
AMPS	2.3 A	1.3 A
MAX STATIC PRESSURE	2.8 INCH	2.6 INCH
WEIGHT NET/ GR	11/12 LBS	11/12 LBS
UNIT SIZE (LxWxH)	10.5 x 10 x 8.5 INCH	10.5 x 10 x 8.5 INCH
WHEEL SPEED (RPM)	3400	2850
MOTOR	1/4 HP	1/4 HP
ATTACHED CORD (18G)	6 FT	6 FT

TROUBLESHOOTING

<u>PROBLEM</u>	<u>POSSIBLE CAUSE</u>	<u>SOLUTION</u>
Motor Not Running	a) Switch is OFF	a) Turn Switch ON
	b) Bad Outlet	b) Check Outlet/ Change to Another Outlet
	c) Faulty Switch/Cord	c) Call Factory for new Switch/Replace Cord
Scraping Noise From Blower	a) Wheel Out Of Line	a) Call Factory for Replacement Advise
Weak Air Flow	a) Obstructed Vents/Inlets	a) Clean Out Vents/Inlets